

Installation instructions

Instructions de montage







Montageanweisung

Montagevoorschrift



Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

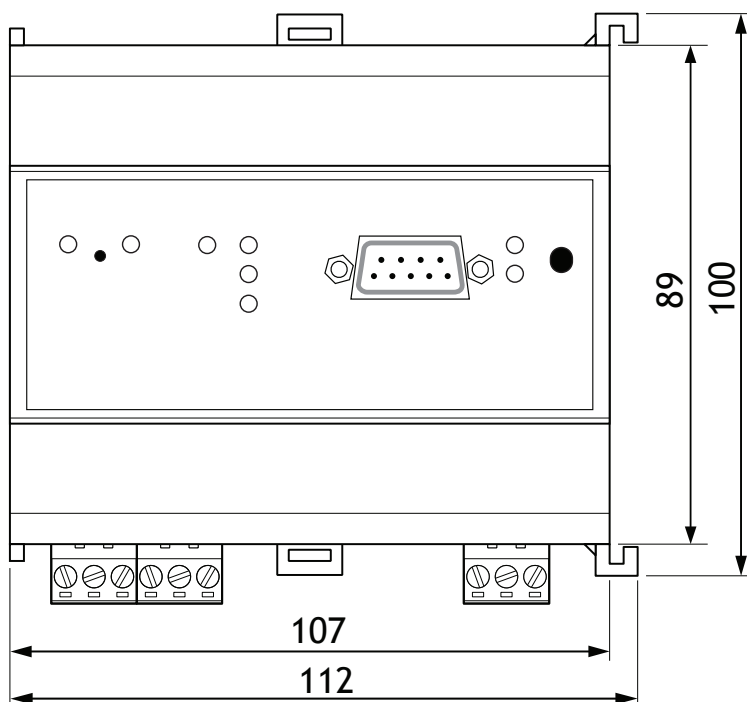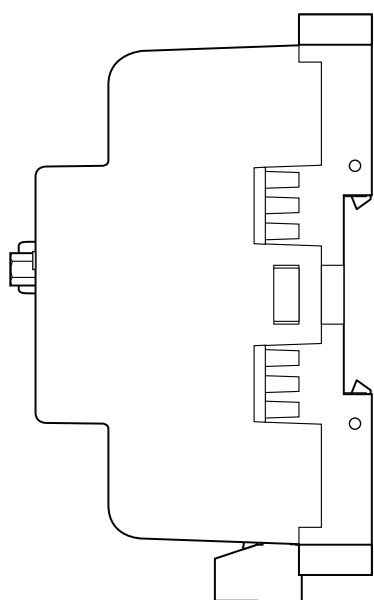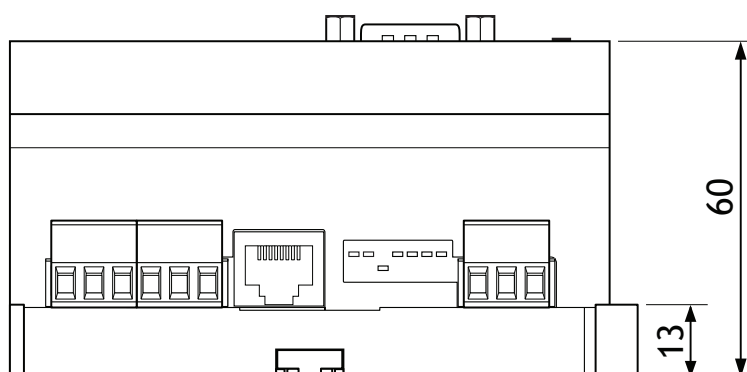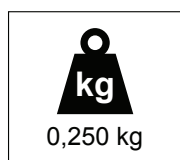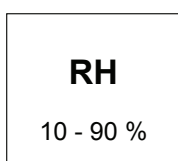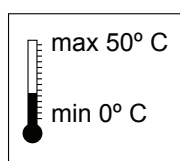


35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

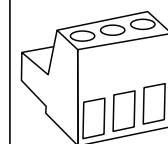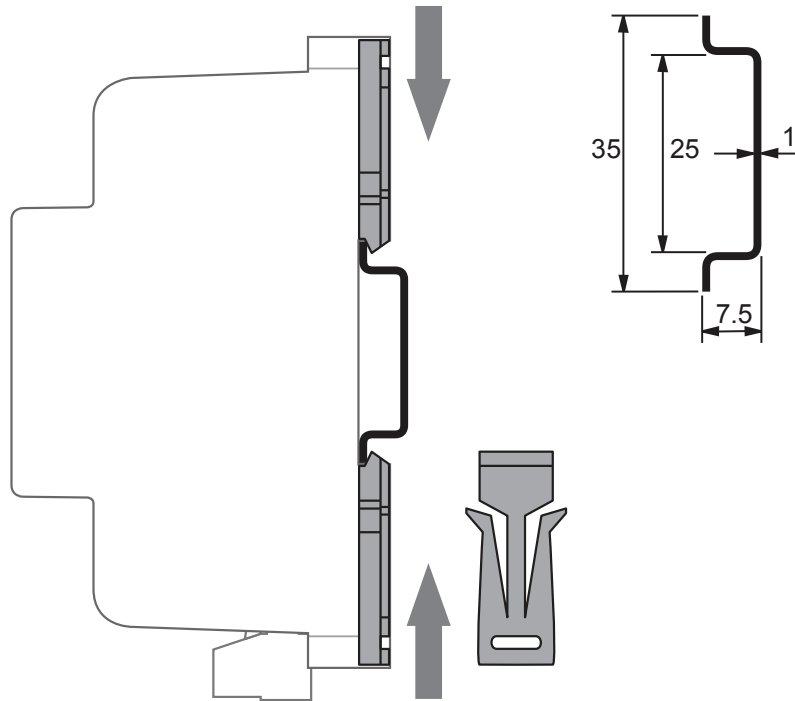


Weidmüller
BLZP 5.08/03/180

0.2 - 2.5 mm²

4.5 lb-in/0.5 Nm



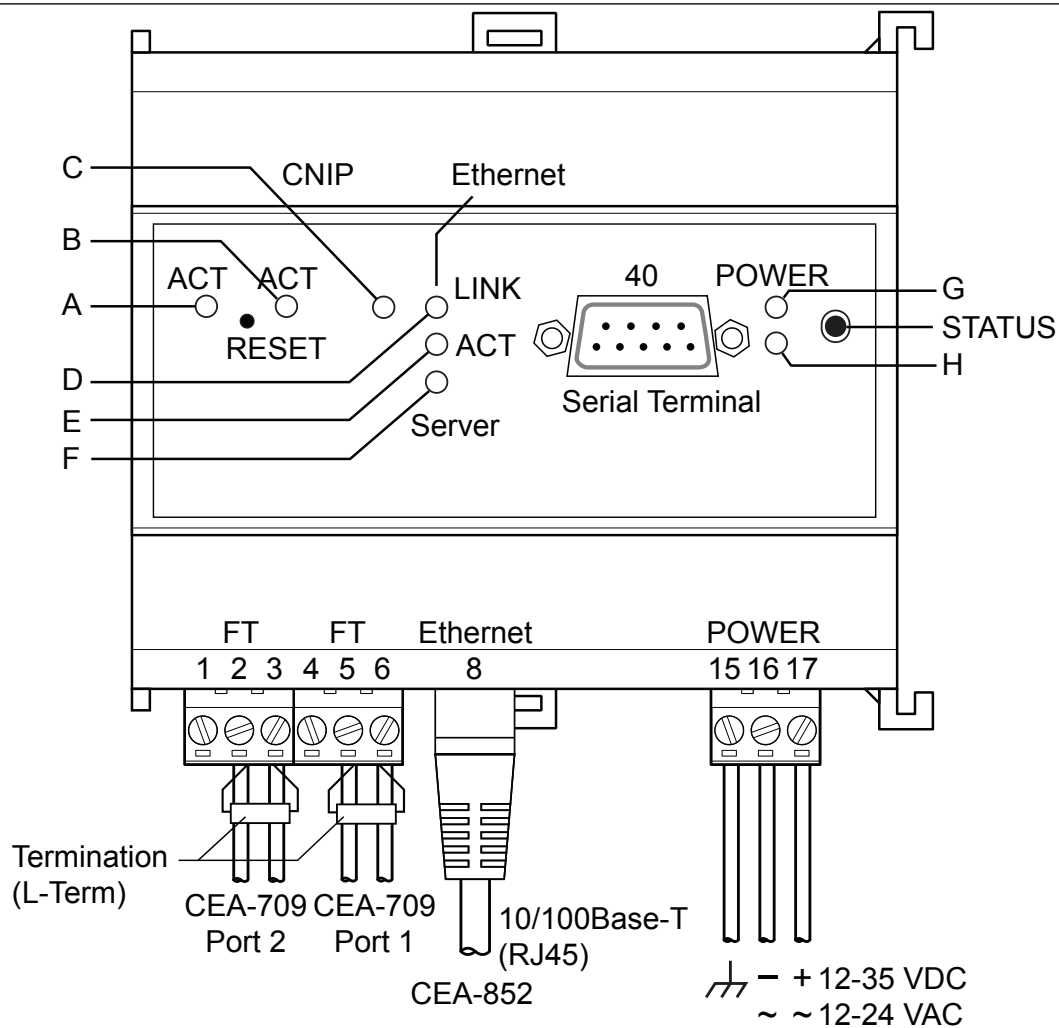

Connectors

CEA-709	1	Input EARTH GND port 2
	2	Input B port 2
	3	Input A port 2
CEA-709	4	Input EARTH GND port 1
	5	Input B port 1
	6	Input A port 1
Ethernet	8	10/100Base-T (RJ45)
POWER	15	Power supply input EARTH GND
	16	Power supply input MINUS
	17	Power supply input PLUS
⚠ Do NOT connect to EARTH GND		
SERIAL	40	EIA-232 (DB9 male)

Buttons

RESET	Reset
STATUS	Send service pin message

User: admin
Password: loytec4u

Status LEDs

A	Green flashing fast	Traffic port 2
	Green flashing at 1 HZ	Port not commissioned
	Red permanent	CEA-709 port damaged
B	Red flashing fast	Traffic overload on port 2
	Green flashing fast	Traffic on port 1
	Green flashing at 1 HZ	Port not commissioned
C	Red permanent	CEA-709 port damaged
	Red flashing fast	Traffic overload on port 1
	Green	IP port is fully functional
D	Yellow	IP port functional but config. is not up-to-date
	Red	IP port is non-functional
	Flashing at 1 Hz	IP port is not commissioned
E	OFF	IP port is not active
	Green	Ethernet link
	Green flashing	Ethernet traffic
F	Green	Config. server enabled
	Green	Power
	OFF	Normal operation

