

## Installation instructions

## Instructions de montage


## Montageanweisung

## Montagevoorschrift



## Instruzioni di montaggio


## Instrucciones de montaje

## Monteringsanvisning

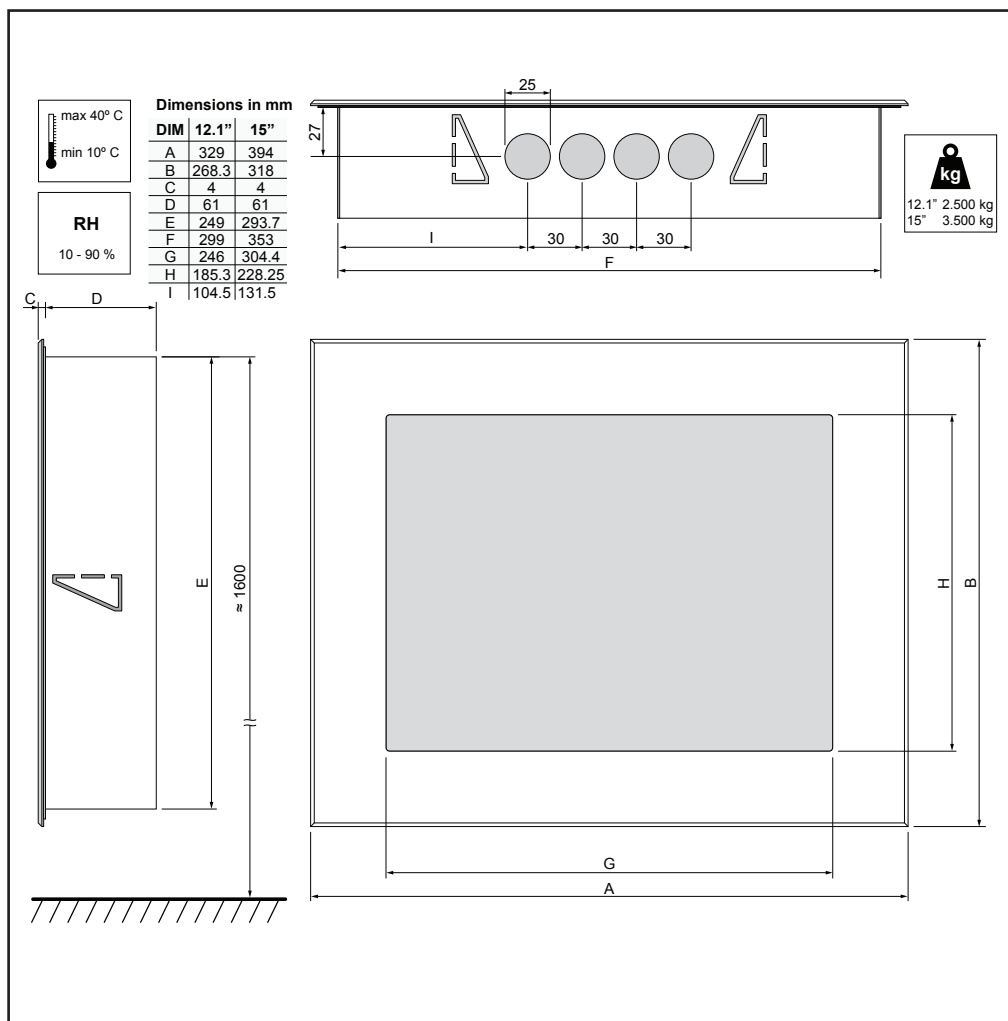

```
User: admin
Password: loytec4u
```

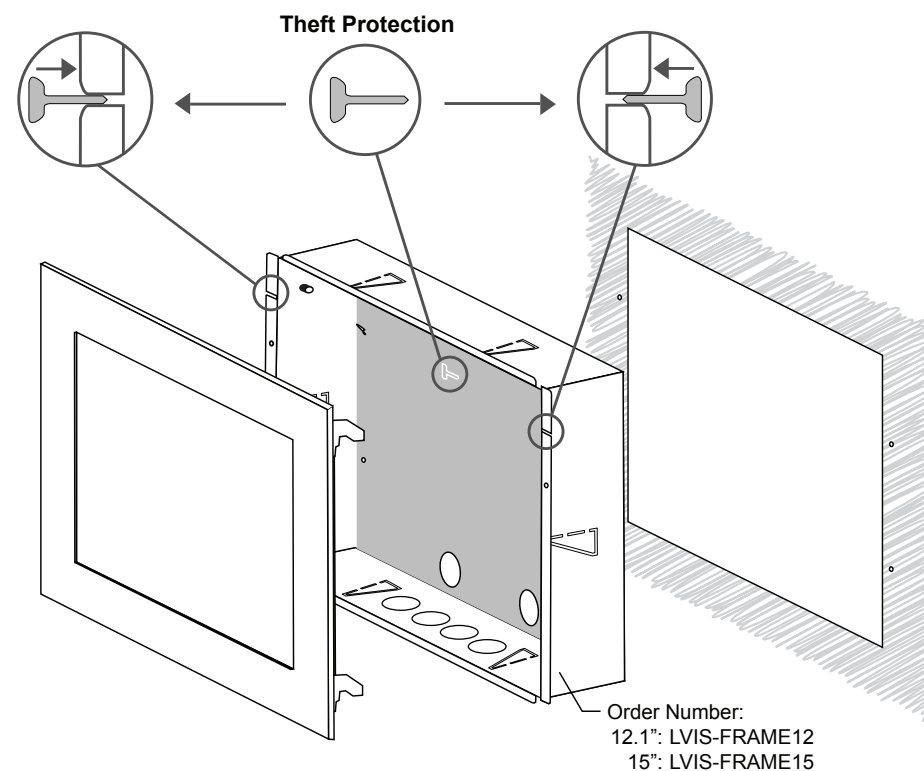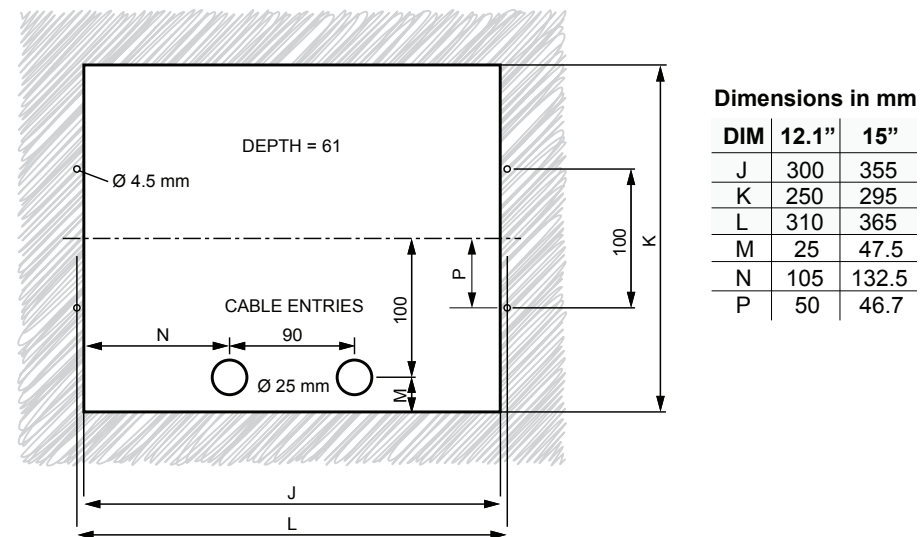

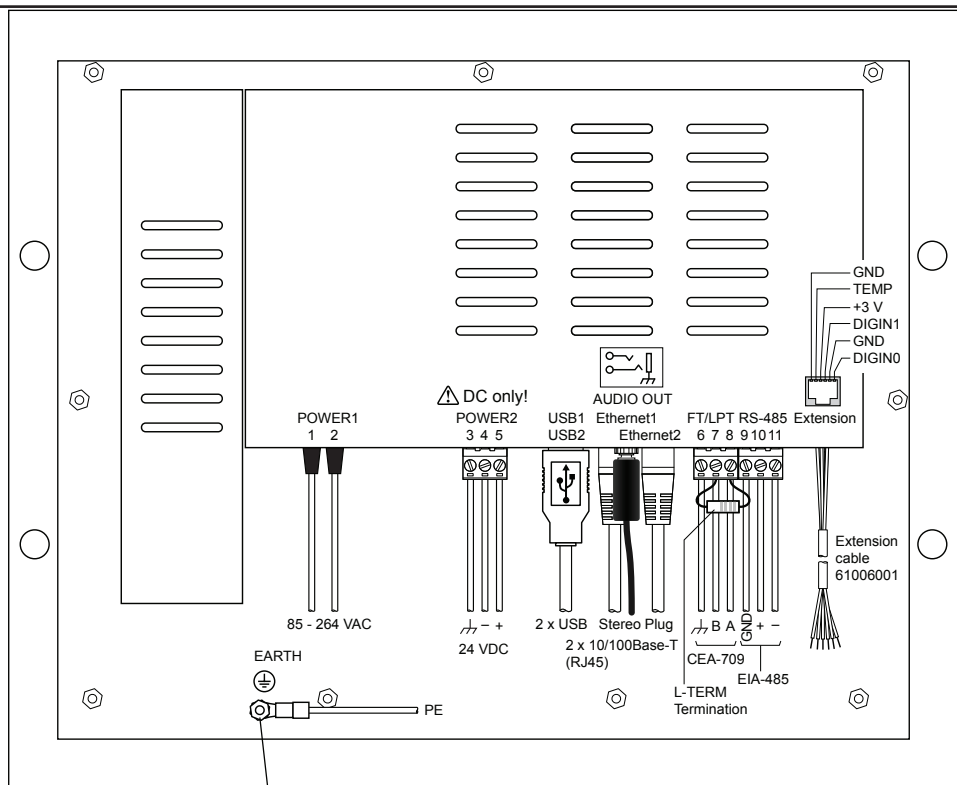

**⚠ PROTECTIVE EARTH MUST BE CONNECTED!**


#### Connectors

POWER1 85-264 VAC	1	Power supply AC input
	2	Power supply AC input
POWER2 24 VDC	3	Power supply DC input earth ground
	4	Power supply DC input MINUS
	5	Power supply DC input PLUS ⚠ do not connect PLUS to GND
CEA-709 TP/FT-10 TP/LPT	6	Input earth ground
	7	Input B
	8	Input A
EIA-485	9	RS-485 GND
	10	RS-485 PLUS
	11	RS-485 MINUS


TRS connector  
Stereo 3.5 mm



Extension cable  
Nr. 61006001

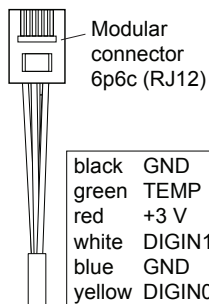


Weidmüller BLZP 5.08/03/180





4.5 lb-in/0.5 Nm

0,2 - 2,5 mm²



All connected together

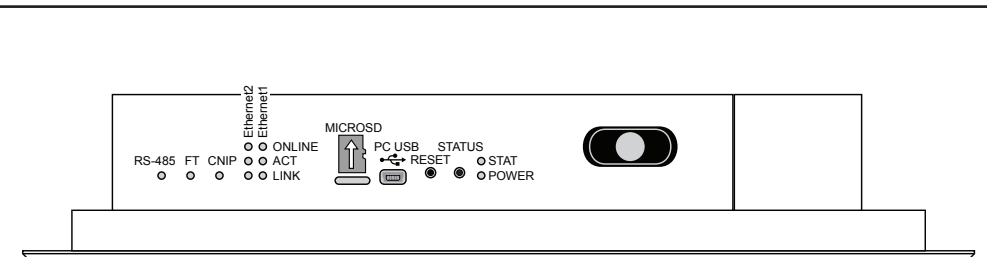

#### Status LEDs

FT	GREEN flashing fast GREEN flashing at 1 Hz RED permanent RED flashing fast	Traffic on CEA-709 port CEA-709 port not commissioned CEA-709 port is damaged Traffic overload on CEA-709 port
CNIP	GREEN YELLOW RED Flashing at 1Hz OFF	IP port is fully functional IP port functional but config. is not up-to-date IP port is non-functional IP port not commissioned IP port not active
LINK	GREEN	Ethernet link
ACT	GREEN flashing	Ethernet traffic
ONLINE	GREEN	Node is in configured online state
PWR	GREEN	Power
STAT	OFF	Normal operation

#### Buttons


RESET	Reset
STATUS	Send service pin message

Node ID of CEA-709 Port

Virtual (Node) ID of CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

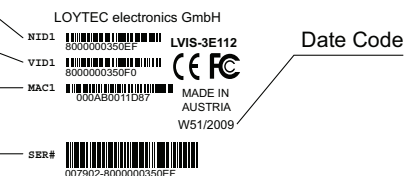

Document 88076801  
2013-10  
Printed in Austria  
Data is subject to change

**LOYTEC**  
A Delta Group Company  
<http://www.loytec.com>  
[support@loytec.com](mailto:support@loytec.com)