

# L-IP redundant

LIP-xxECRB CEA-709/IP Router

## Installation instructions

Instructions de montage






Montageanweisung

Montagevoorschrift



Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

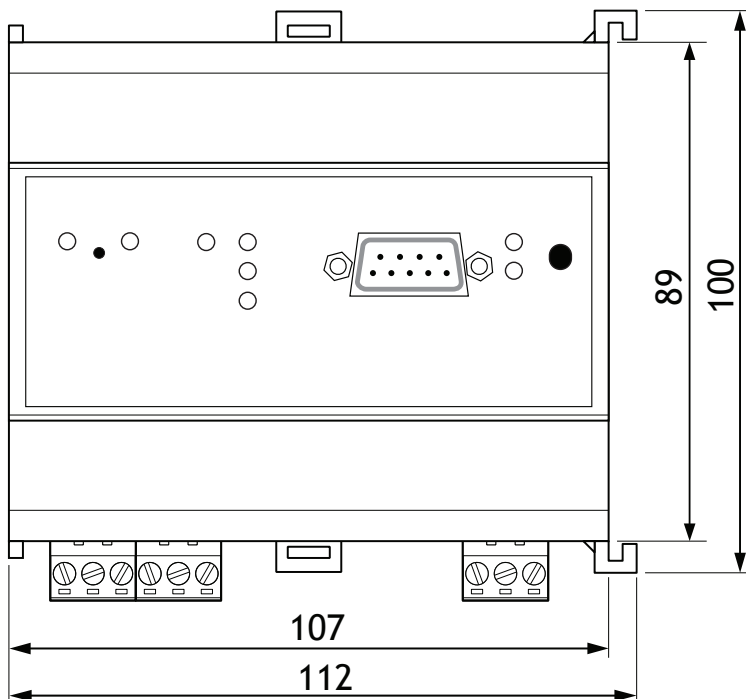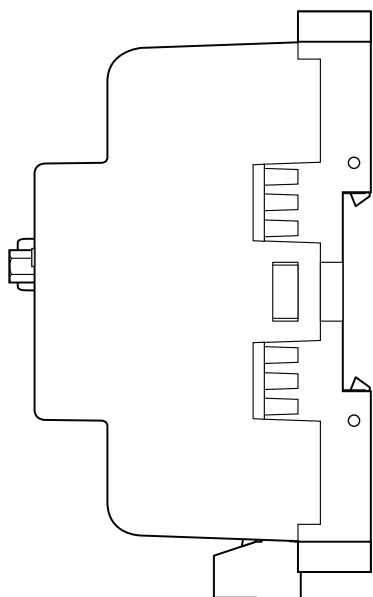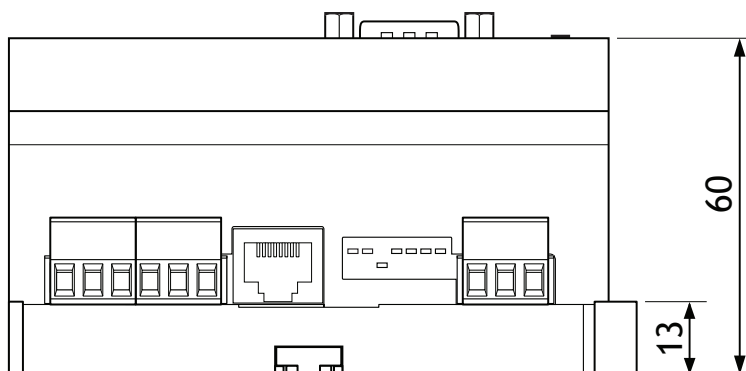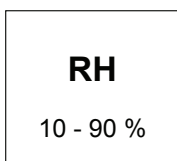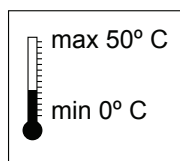


35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

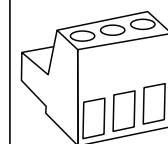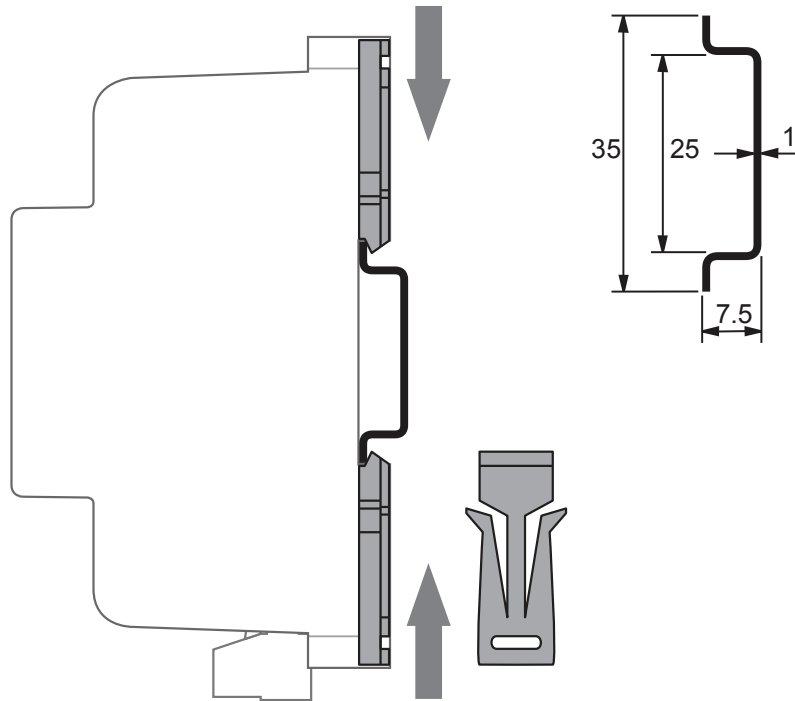


4.5 lb-in/0.5 Nm

Weidmüller  
BLZP 5.08/03/180

0.2 - 2.5 mm<sup>2</sup>



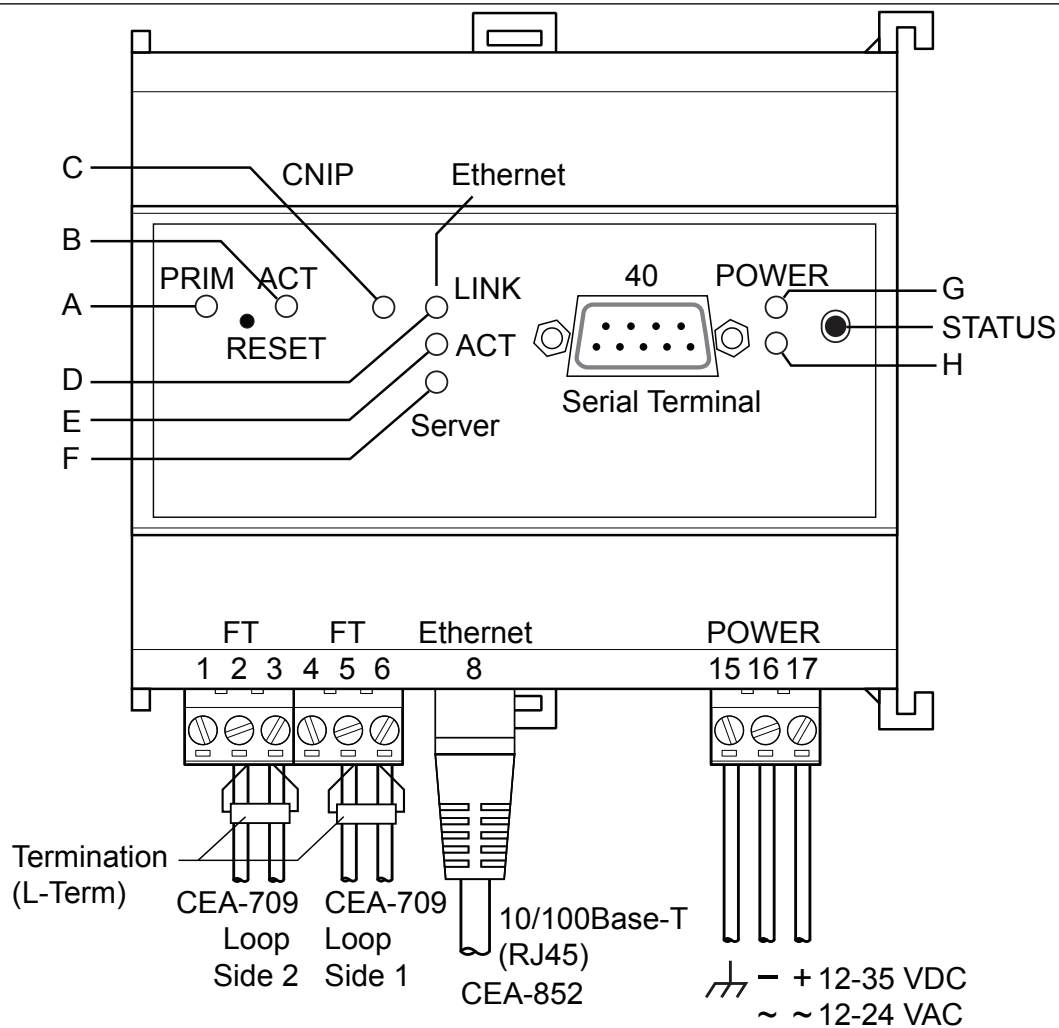

### Connectors

CEA-709	1	Do not connect
	2	Input B loop side 2
	3	Input A loop side 2
CEA-709	4	Input EARTH GND
	5	Input B loop side 1
	6	Input A loop side 1
Ethernet	8	10/100Base-T (RJ45)
POWER	15	Power supply input EARTH GND
	16	Power supply input MINUS
	17	Power supply input PLUS
⚠ Do NOT connect to EARTH GND		
SERIAL	40	EIA-232 (DB9 male)

### Buttons

RESET	Reset
STATUS	Send service pin message

### Status LEDs

A	Green	Device is active
	Off	Device is inactive (standby)
	Orange	Problem with twin router
	Red	Device is inactive due to error
B	Green flashing fast	Traffic on CEA-709 loop
	Green flashing at 1 Hz	Port not commissioned
	Red permanent	CEA-709 port damaged
	Red flashing fast	Loop open/Traffic overload
C	Green	IP port is fully functional
	Yellow	IP port functional but config. is not up-to-date
	Red	IP port is non-functional
	Flashing at 1 Hz	IP port is not commissioned
	OFF	IP port is not active
D	Green	Ethernet link
E	Green flashing	Ethernet traffic
F	Green	Config. server enabled
G	Green	Power
H	OFF	Normal operation

User: admin  
Password: loytec4u

