

Installation instructions

Instructions de montage






Montageanweisung

Montagevoorschrift



Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

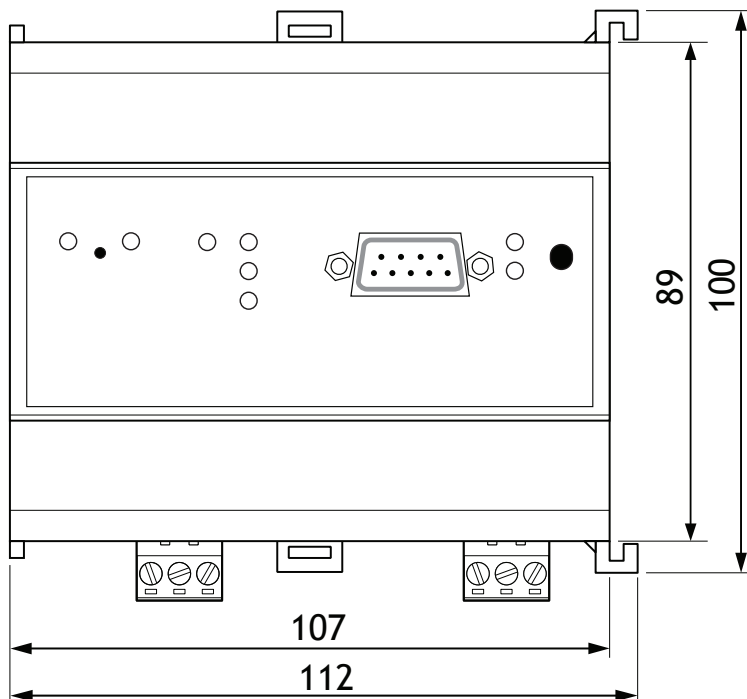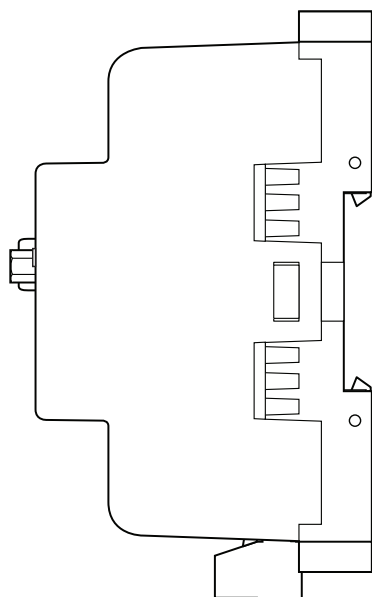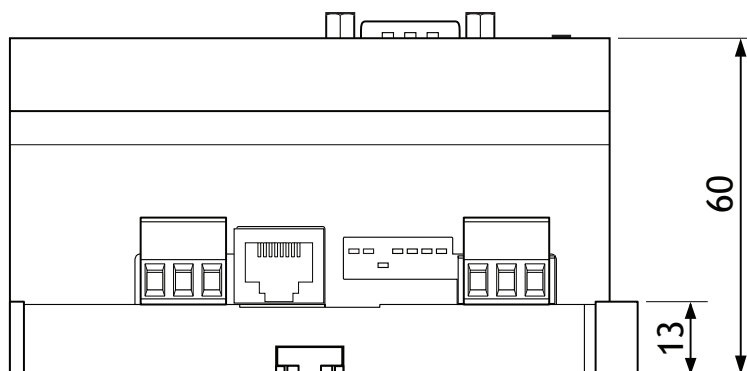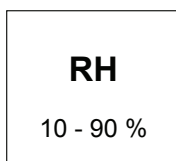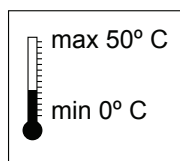


35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

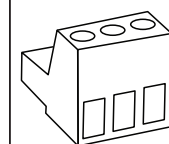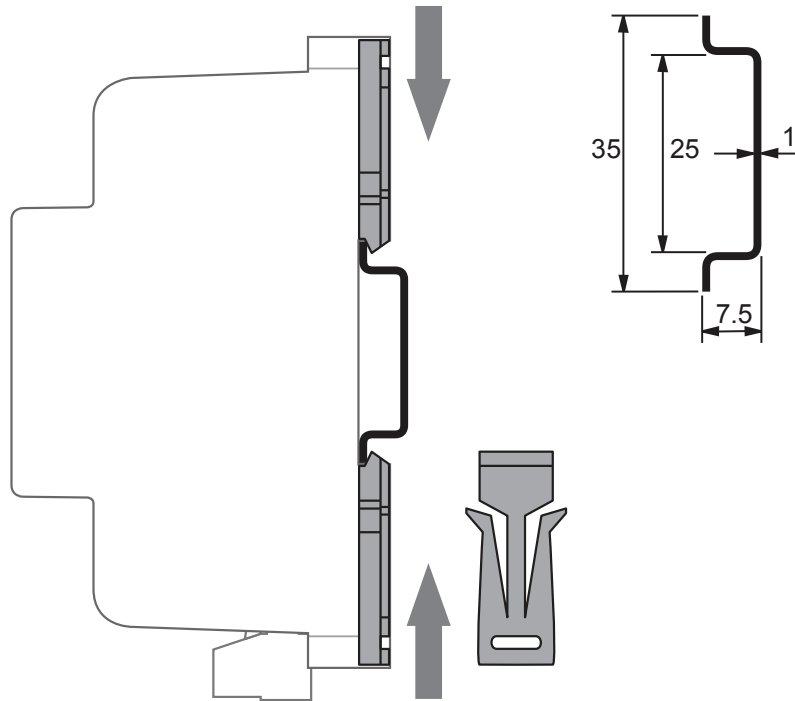

Weidmüller
BLZP 5.08/03/180


0.2 - 2.5 mm²

4.5 lb-in/0.5 Nm



Status LEDs		
B	Green flashing fast Green flashing at 1 HZ Red permanent Red flashing fast	Traffic on port 1 Port not commissioned CEA-709 port damaged Traffic overload on port 1
C	Green Yellow Red Flashing at 1 Hz OFF	IP port is fully functional IP port functional but config. is not up-to-date IP port is non-functional IP port is not commissioned IP port is not active
D	Green	Ethernet link
E	Green flashing	Ethernet traffic
F	Green	Config. server enabled
G	Green	Power
H	OFF	Normal operation

Serial Port

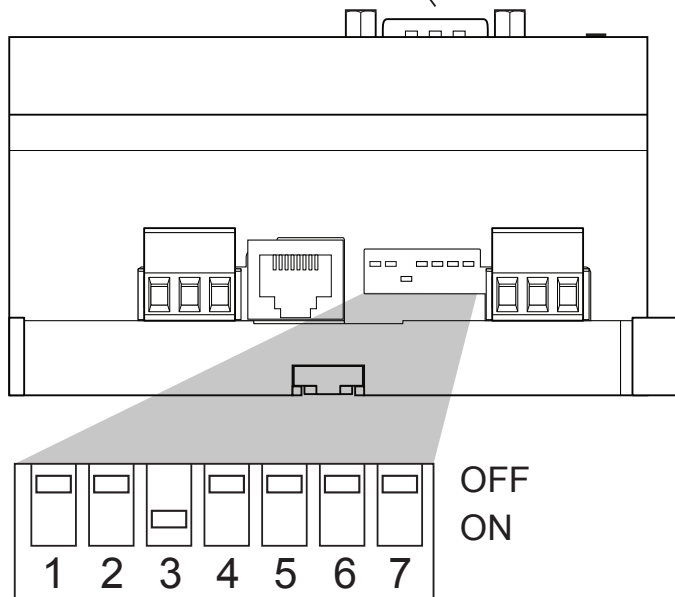

OFF
ON

DIP1	DIP2	Function
ON	ON	Smart switch mode
ON	OFF	Repeater mode
OFF	ON	Smart switch mode/ subnet learning
OFF	OFF	Configured CEA-709 router

DIP3	Function (RS-485 version only)
ON	Bit-rate auto detection on
OFF	Bit-rate auto detection off

DIP4	Must be OFF
DIP5	Must be OFF
DIP6	Must be OFF
DIP7	Must be OFF

Node ID of router on EIA-709 Port 1

Virtual (Node) ID of router on CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

