

Installation instructions

Instructions de montage







Montageanweisung

Montagevoorschrift



Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

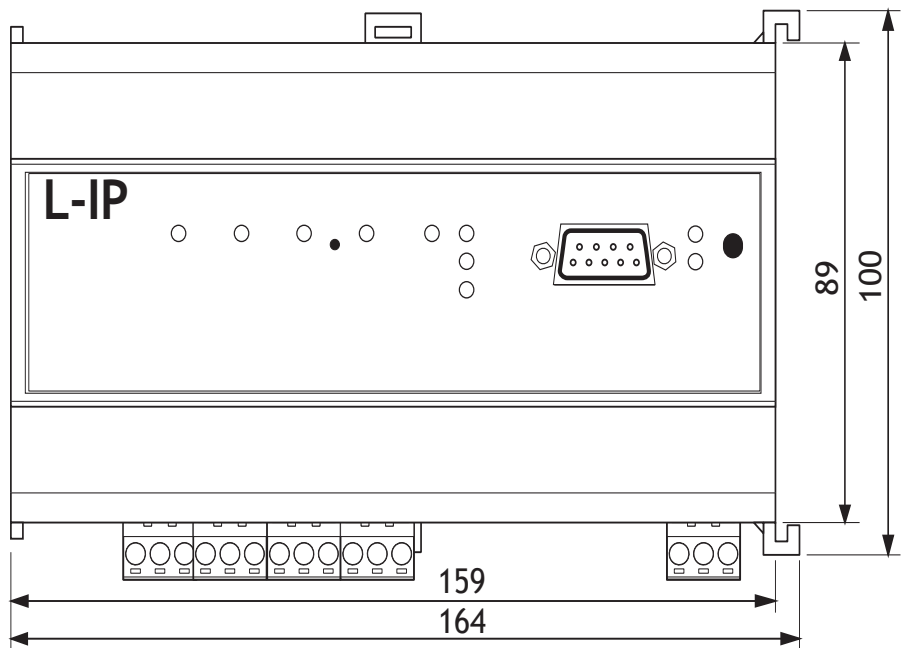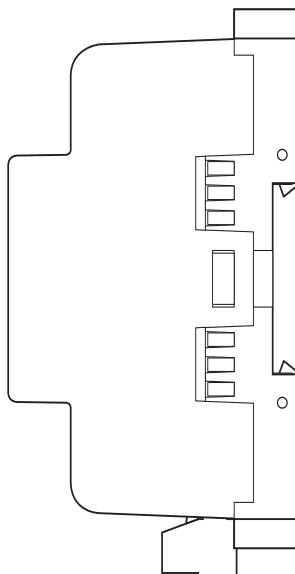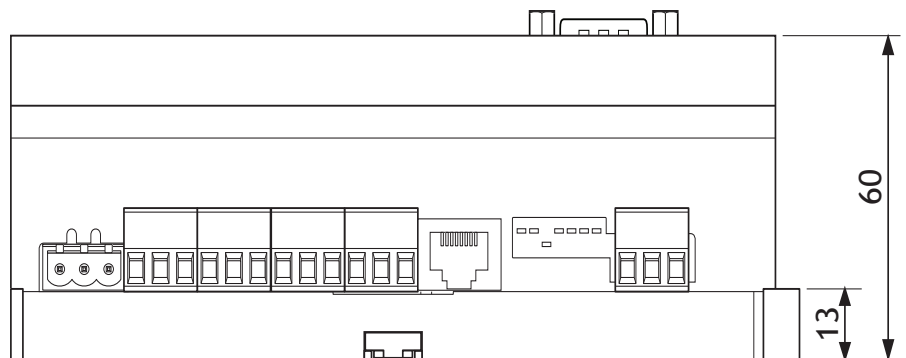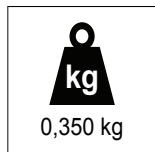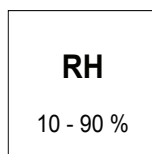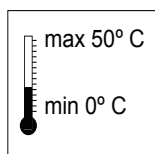


35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

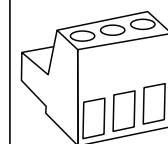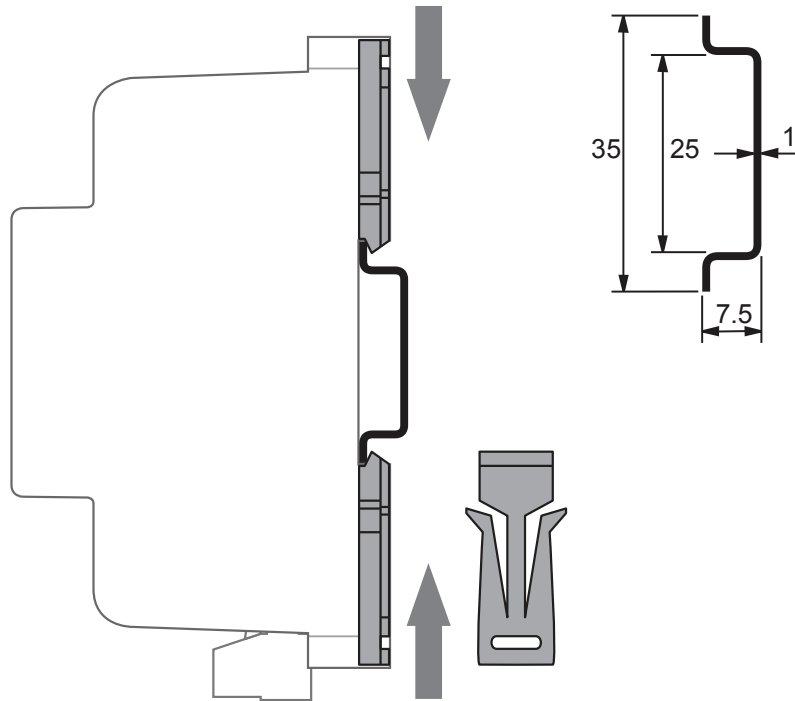


4.5 lb-in/0.5 Nm

Weidmüller
BLZP 5.08/03/180

0.2 - 2.5 mm²



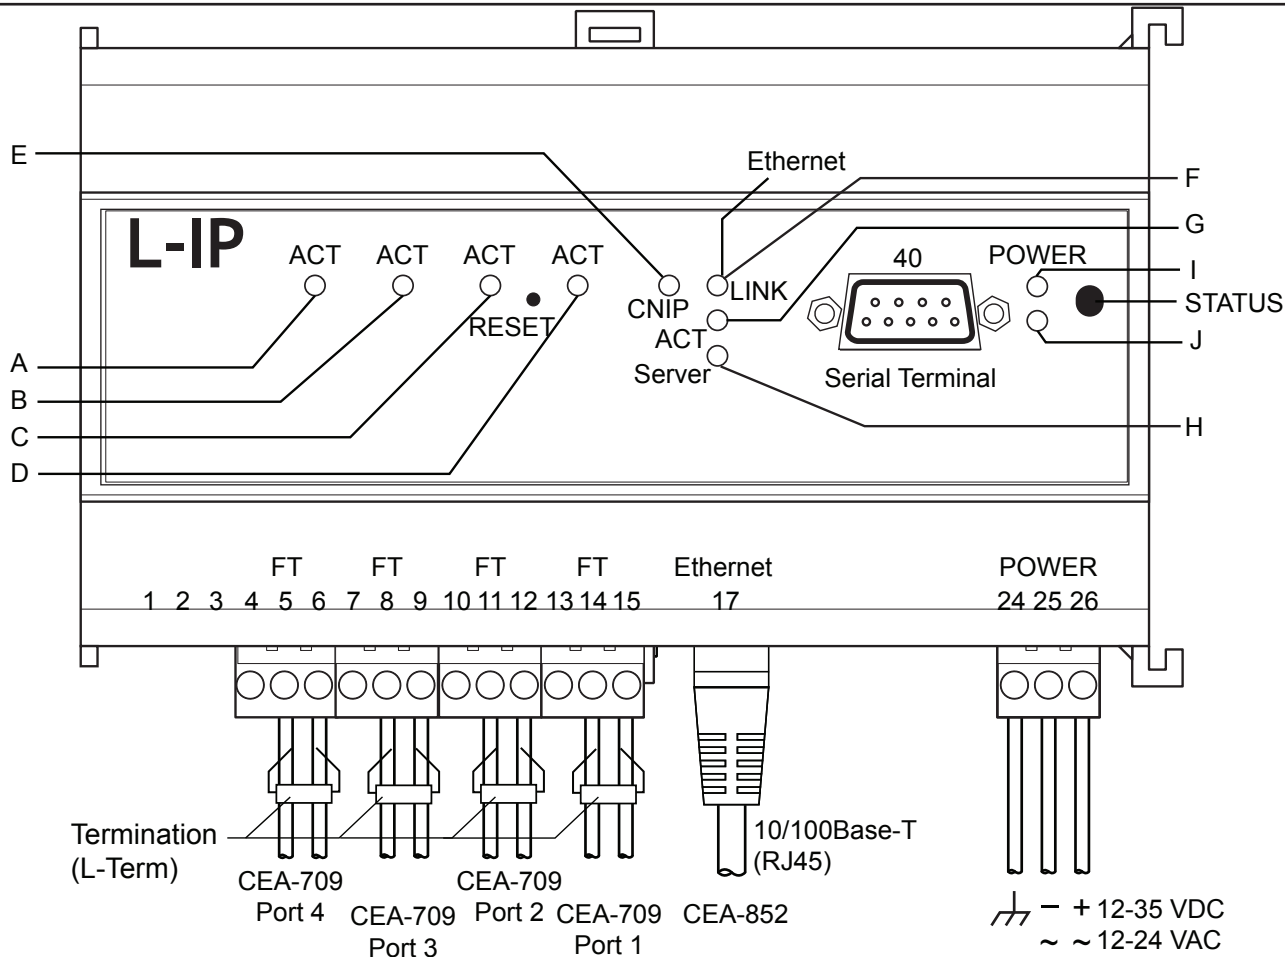

Connectors

CEA-709	4	Input EARTH GND port 4
	5	Input B port 4
	6	Input A port 4
CEA-709	7	Input EARTH GND port 3
	8	Input B port 3
	9	Input A port 3
CEA-709	10	Input EARTH GND port 2
	11	Input B port 2
	12	Input A port 2
CEA-709	13	Input EARTH GND port 1
	14	Input B port 1
	15	Input A port 1
Ethernet	17	10/100Base-T (RJ45)
POWER	15	Power supply input EARTH GND
	16	Power supply input MINUS
	17	Power supply input PLUS
		Do NOT connect to EARTH GND
SERIAL	40	EIA-232 (DB9 male)

Buttons

RESET	Reset
STATUS	Send service pin message

Status LEDs

A	Green flashing fast Green flashing at 1 HZ Red permanent Red flashing fast	Traffic port 4 Port not commissioned CEA-709 port damaged Traffic overload on port 4
B	Green flashing fast Green flashing at 1 HZ Red permanent Red flashing fast	Traffic on port 3 Port not commissioned CEA-709 port damaged Traffic overload on port 3
C	Green flashing fast Green flashing at 1 HZ Red permanent Red flashing fast	Traffic on port 2 Port not commissioned CEA-709 port damaged Traffic overload on port 2
D	Green flashing fast Green flashing at 1 HZ Red permanent Red flashing fast	Traffic on port 1 Port not commissioned CEA-709 port damaged Traffic overload on port 1
E	Green Yellow Red Flashing at 1 Hz OFF	IP port is fully functional IP port functional but config. is not up-to-date IP port is non-functional IP port is not commissioned IP port is not active
F	Green	Ethernet link
G	Green flashing	Ethernet traffic
H	Green	Config. server enabled
I	Green	Power
J	OFF	Normal operation

User: admin
Password: loytec4u

