

# LSMI-804 SMI Interface

## Installation instructions

Instructions de montage


Montageanweisung

Montagevoorschrift


Istruzioni di montaggio

Instrucciones de montaje


Monteringsanvisning

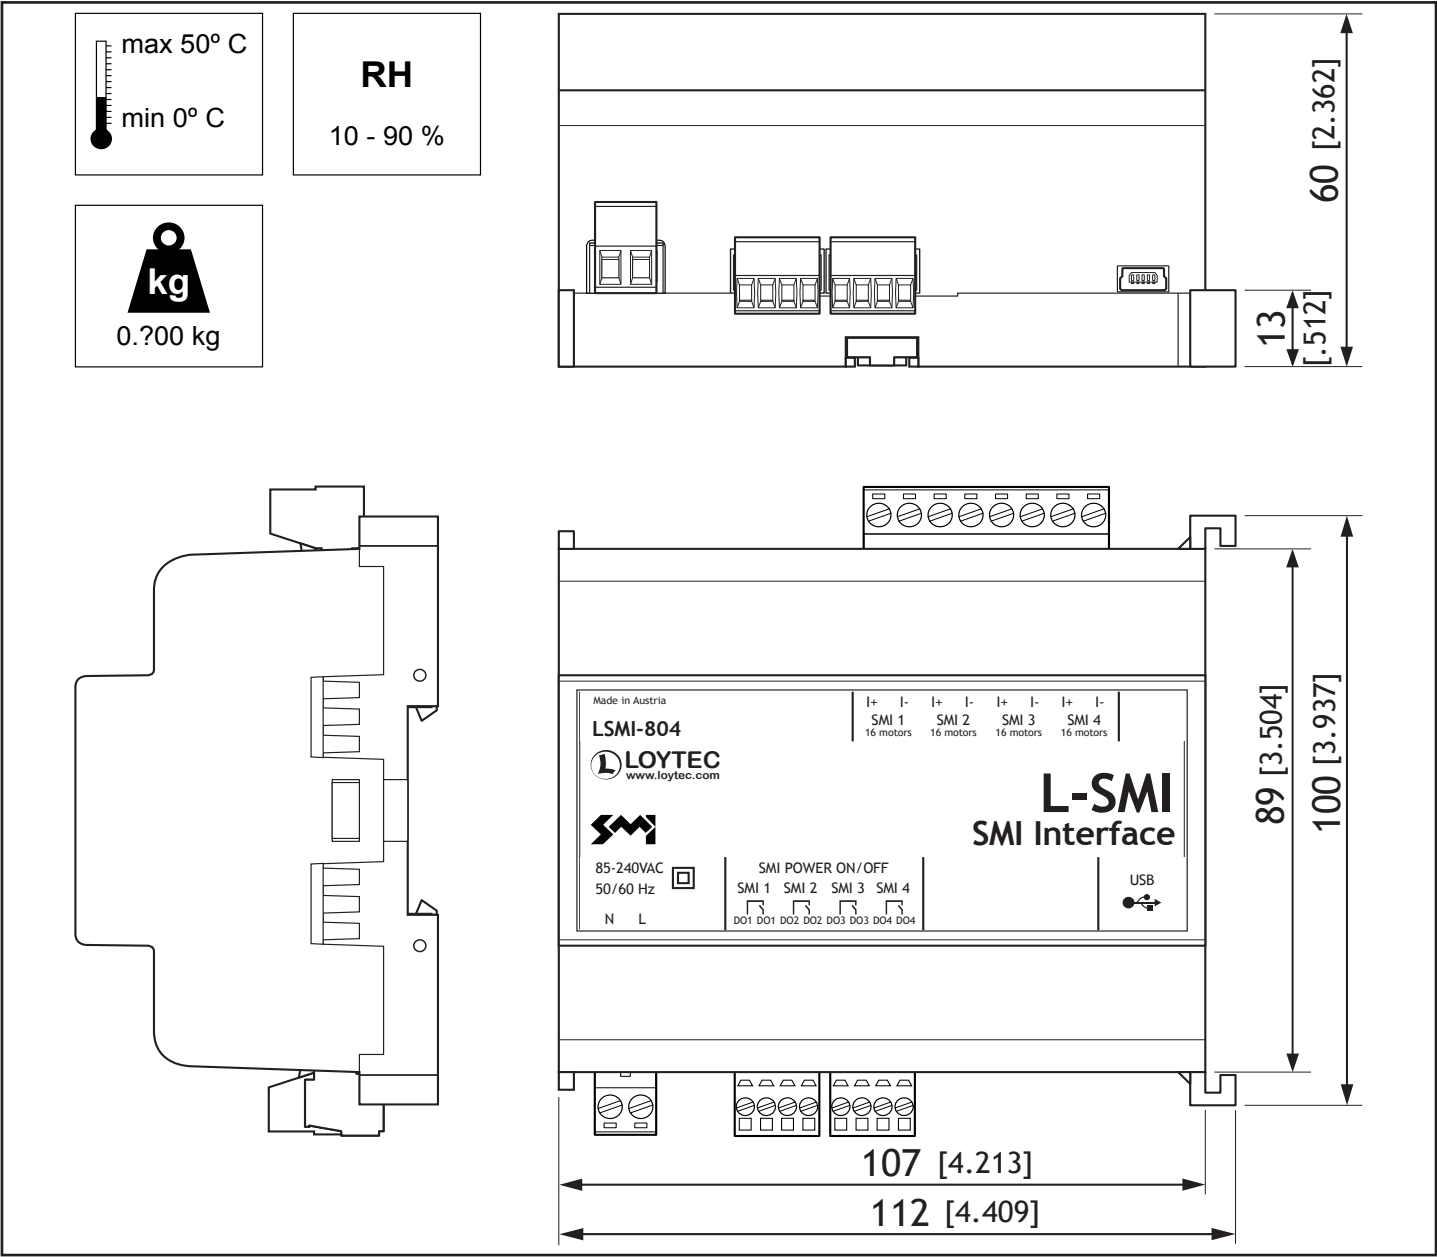

Date Code

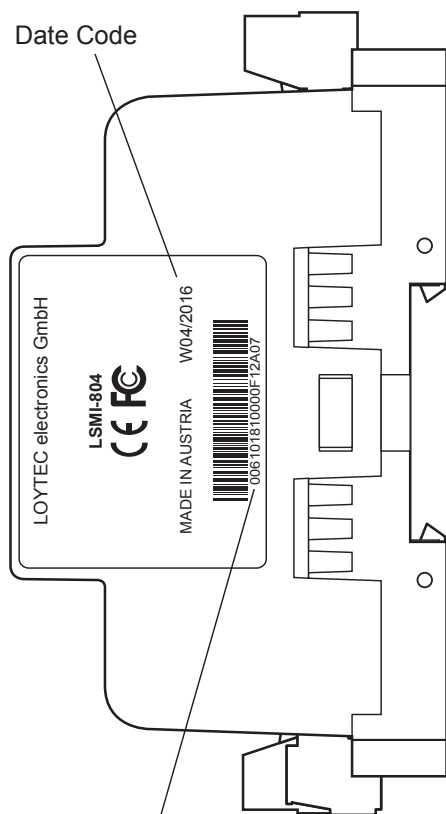


Serial number of the device

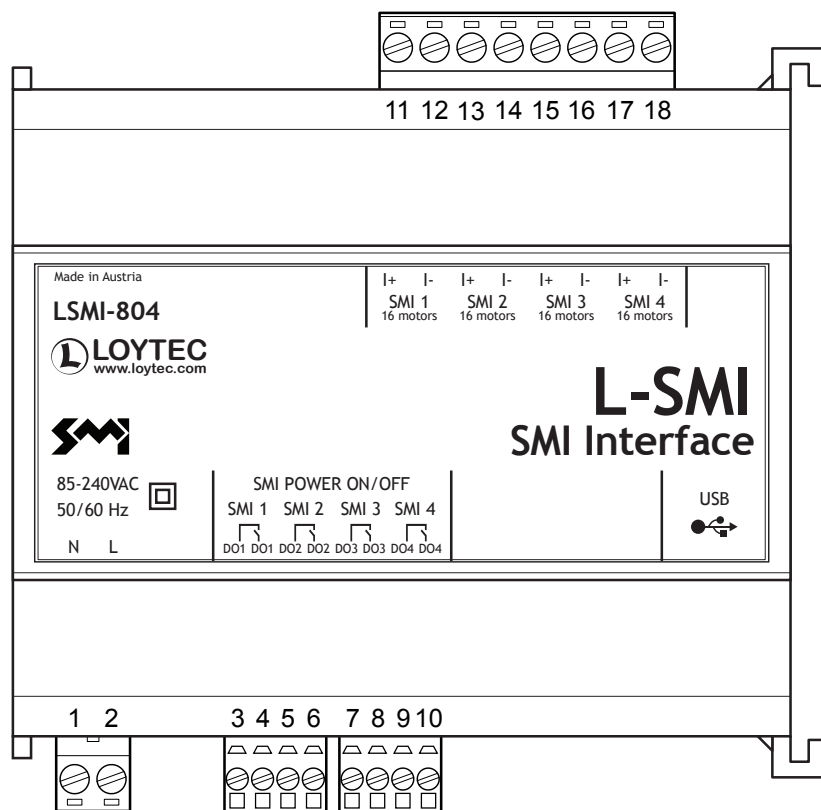

## Connectors

85-240 VAC 50/60Hz	1	Input N Neutral
	2	Input L Line (max. 3W)
Output SMI 1	3	Output DO1
	4	Output DO1
Output SMI 2	5	Output DO2
	6	Output DO2
Output SMI 3	7	Output DO3
	8	Output DO3
Output SMI 4	9	Output DO4
	10	Output DO4
SMI 1 16 Motors	11	SMI I+
	12	SMI I-
SMI 2 16 Motors	13	SMI I+
	14	SMI I-
SMI 3 16 Motors	15	SMI I+
	16	SMI I-
SMI 4 16 Motors	17	SMI I+
	18	SMI I-
USB		Mini USB, connect to L-INX, L-GATE, L-DALI

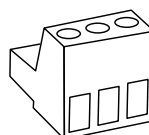

4.5 lb-in/0.5 Nm

2 poles: Weidmüller BLZP 5.08/02/180


8 poles: Weidmüller BLZP 5.08/08/180

4 poles: Weidmüller BLZP 3.50/04/180

Weidmüller

BL 5.08

0.2 - 2.5 mm<sup>2</sup>



Weidmüller

BL 3.5

0.2 - 1.5 mm<sup>2</sup>



It is not allowed to mix SMI and SMI-LoVo drives on SMI interface.  
If SMI-LoVo drives are installed please cut this label and attach it  
over the SMI logo on the device.



Document 88086401 Web edition

01/2016

Printed in Austria

Data is subject to change

**LOYTEC**

A Delta Group Company

<http://www.loytec.com>

[support@loytec.com](mailto:support@loytec.com)