

LIP-ME204 BACnet IP to MS/TP Router

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift


Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

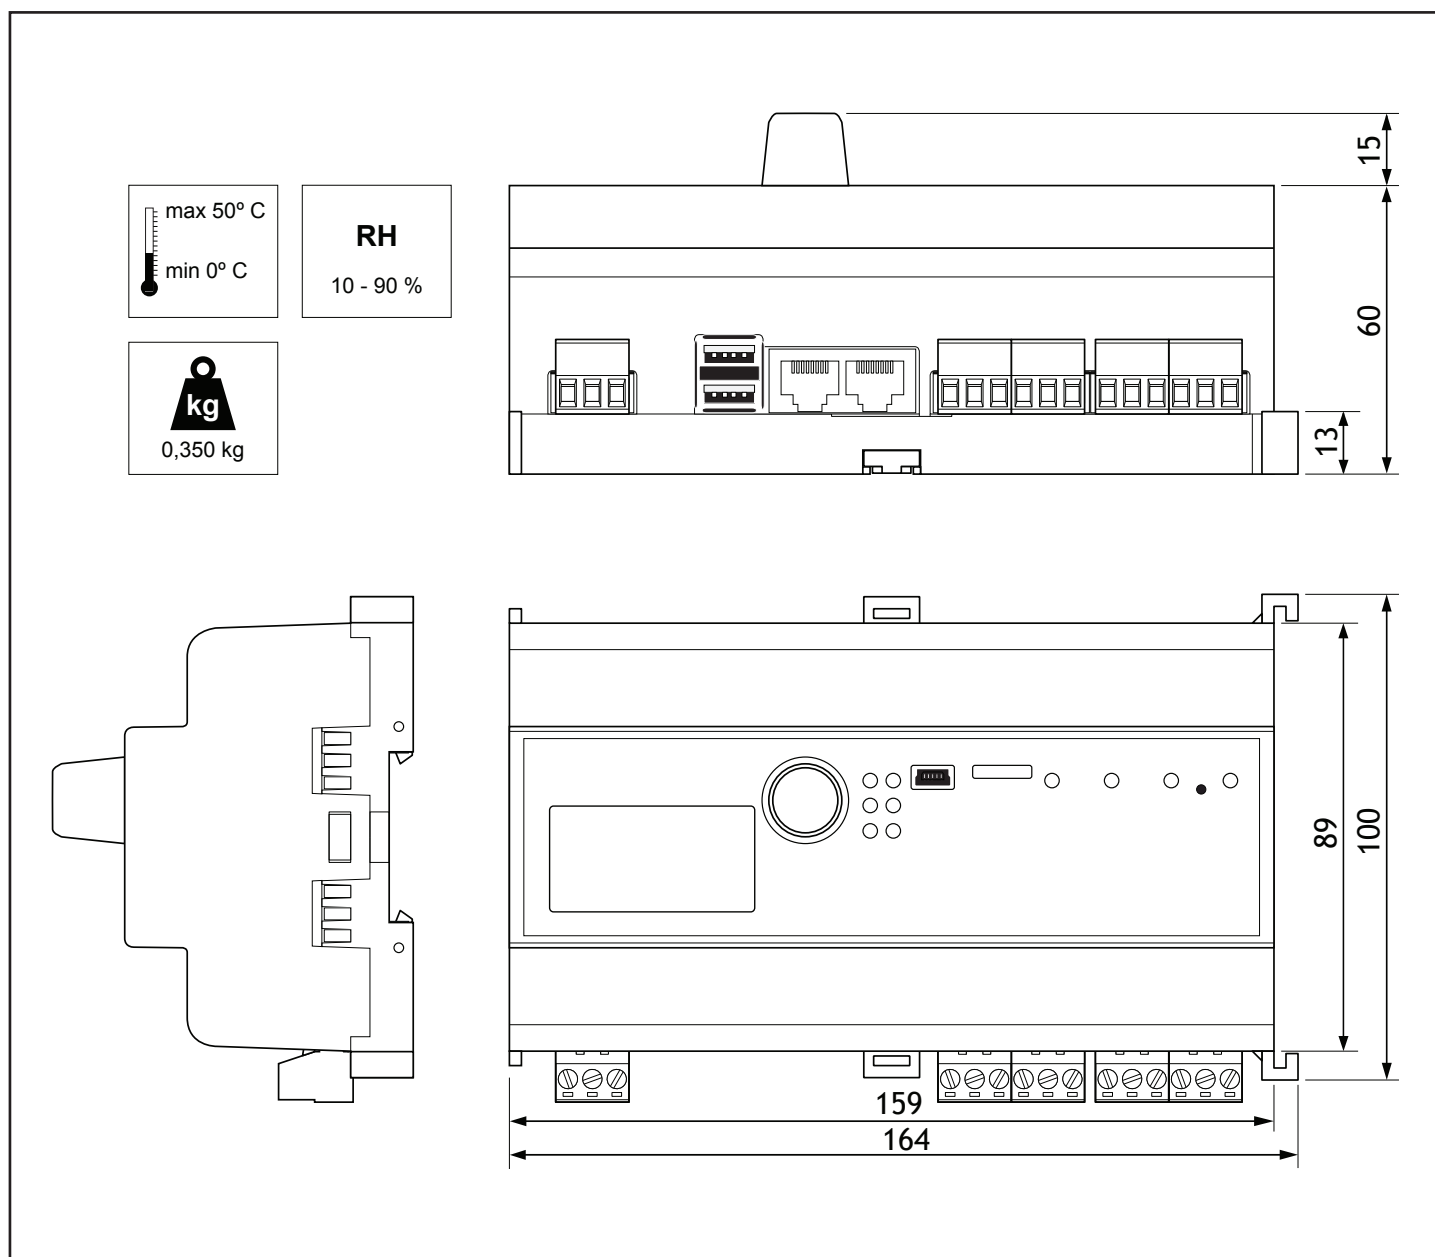


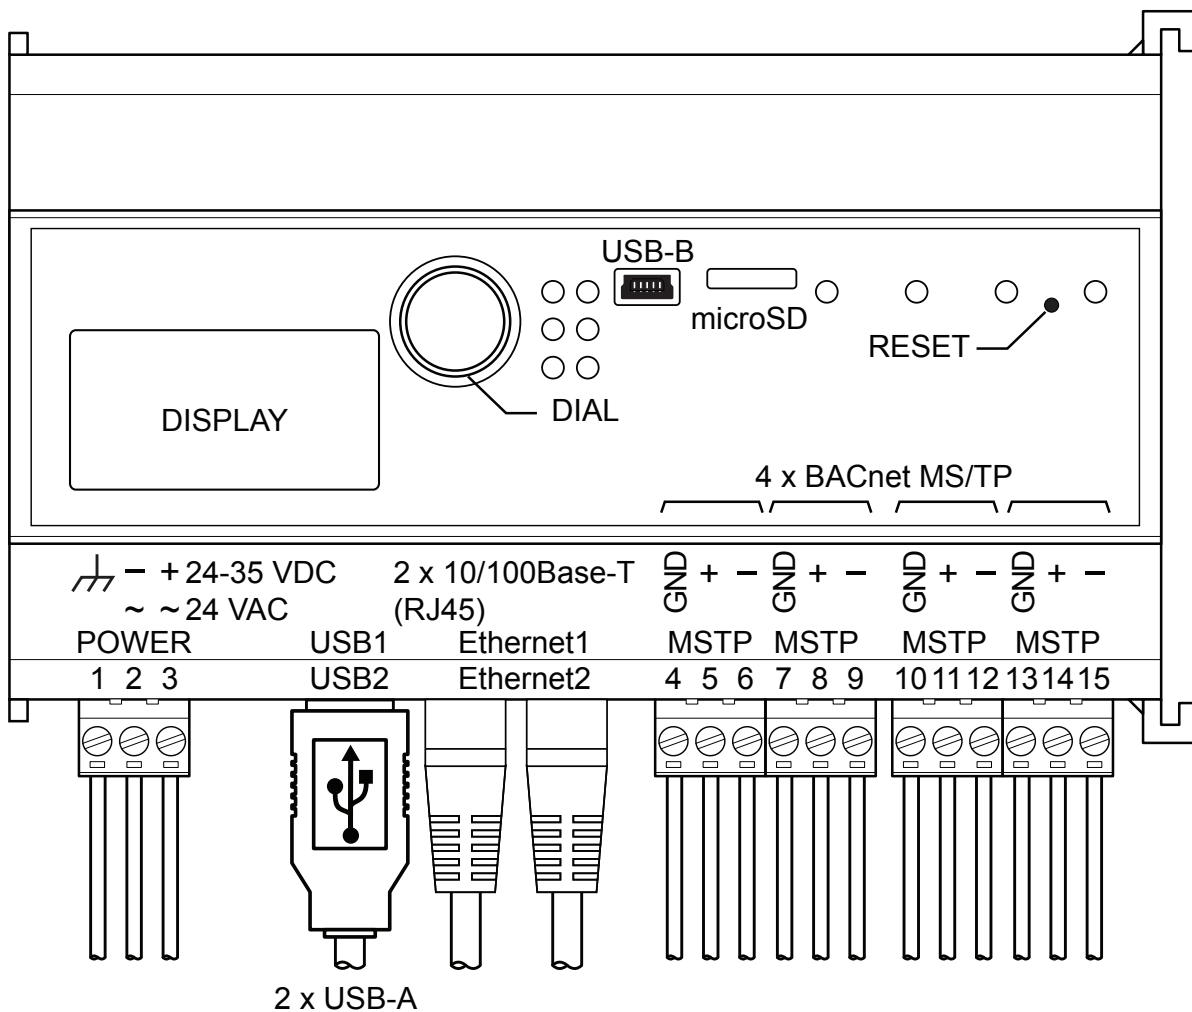


Connectors		
POWER	1	Power supply input EARTH GND
	2	Power supply input MINUS Can be connected to EARTH GND
	3	Power supply input PLUS  Must NOT be connect to EARTH GND
BACnet MS/TP Port 1	4	Input GND
	5	Input +
	6	Input -
BACnet MS/TP Port 2	7	Input GND
	8	Input +
	9	Input -
BACnet MS/TP Port 3	10	Input GND
	11	Input +
	12	Input -
BACnet MS/TP Port 4	13	Input GND
	14	Input +
	15	Input -

Connectors		
USB1	USB-A	USB Host
USB2	USB-A	USB Host
USB-B	USB-B	PC
Ethernet1	RJ45	10/100Base-T
Ethernet2	RJ45	10/100Base-T
microSD	slot	microSD card max. 2 GB

Buttons	
RESET	Reset
DIAL	Turn-and-Push Dial

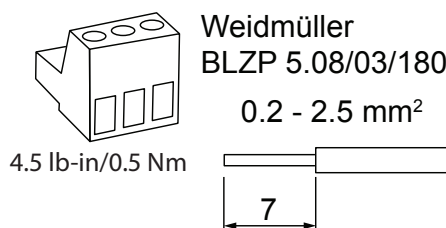

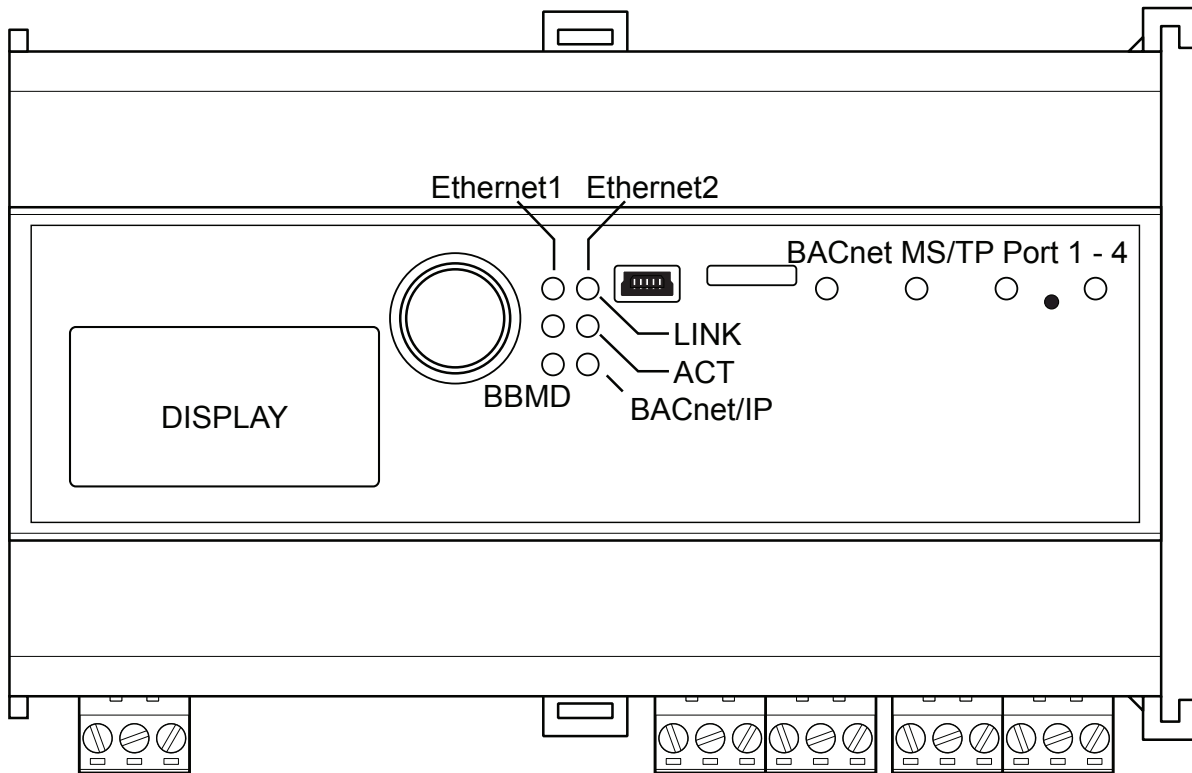


Status LEDs		
LINK	GREEN	Ethernet link
ACT	GREEN flashing	Ethernet traffic
MS/TP	GREEN flashing fast	Traffic on BACnet MS/TP port
	RED permanent RED flashing fast	MS/TP port damaged MS/TP traffic overload
BBMD	GREEN	BBMD enabled
BACnet/IP	GREEN flashing	Traffic on BACnet/IP port

Please update the firmware of the device first,
see www.loytec.com

User: admin
Password: loytec4u

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

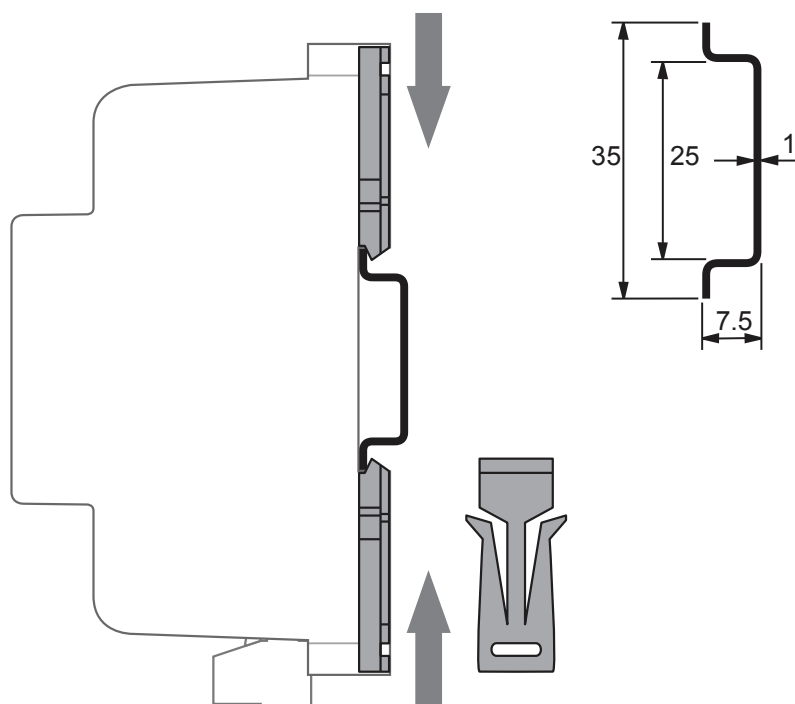

MAC address of Ethernet port

Serial number of the device

