

L-VIS LVIS-ME200 Touch Panel 5.7"

Installation instructions

Instructions de montage






Montageanweisung

Montagevoorschrift



Istruzioni di montaggio


Instrucciones de montaje

Monteringsanvisning

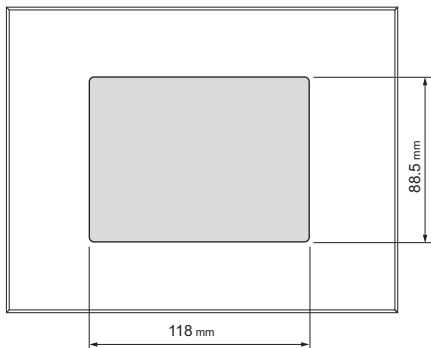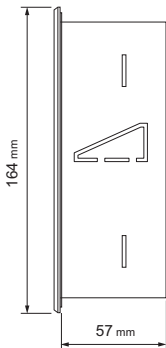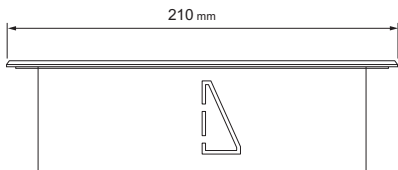

User: admin
Password: loytec4u

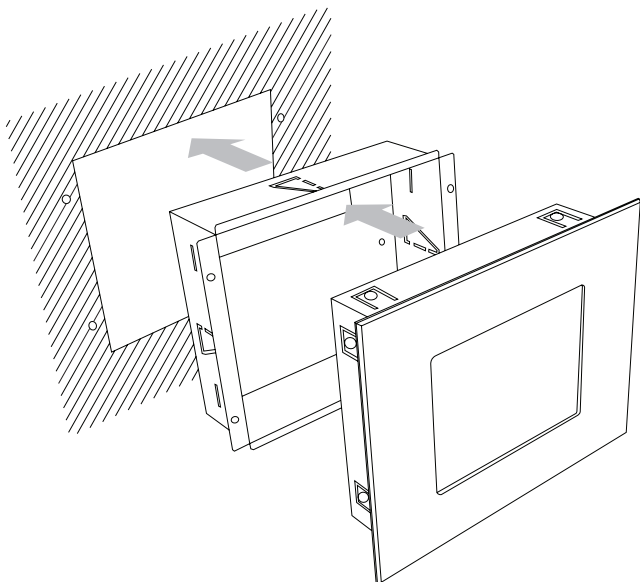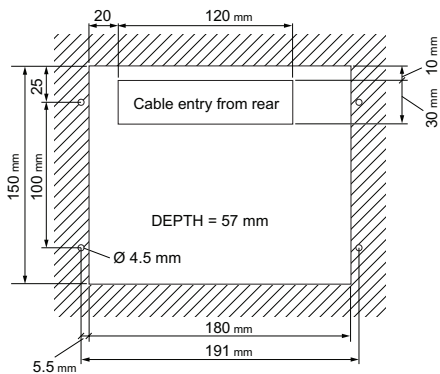

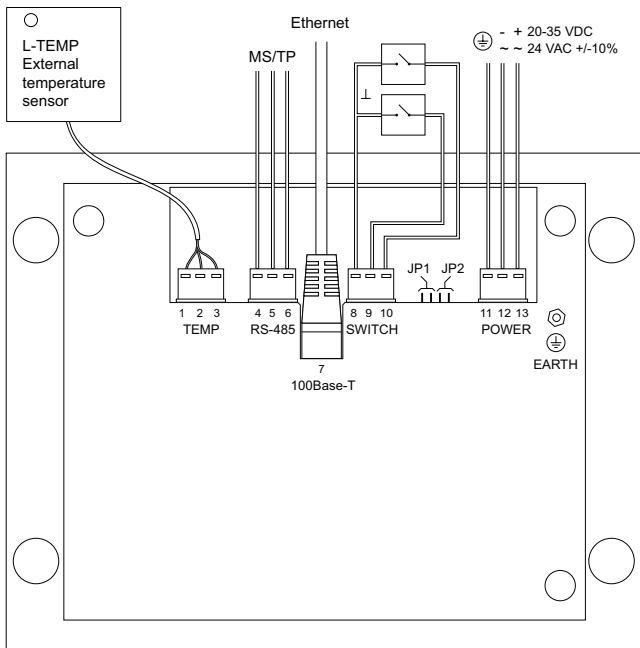



Connectors

1	Temperatur sensor data
2	Temperatur sensor GND
3	Temperatur sensor +3V
4	MS/TP input GND
5	MS/TP +
6	MS/TP -
7	Ethernet 10/100 Base-T (RJ45)
8	Digital input GND
9	Digital input 1
10	Digital input 0
11	Power supply input earth ground
12	Power supply input MINUS
13	Power supply input PLUS
⚠ Do not connect PLUS to GND	

Jumpers

JP1		Normal operation
		Clear configuration
JP2		MS/TP channel active
		BIP channel active

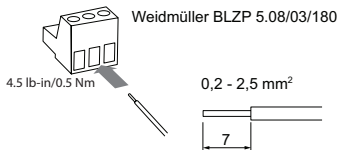

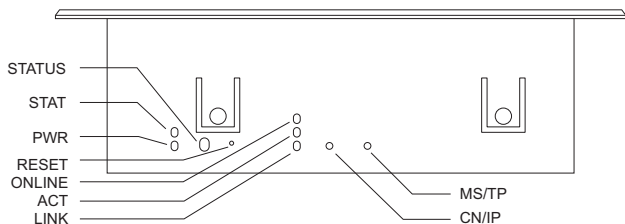

Status LEDs


MS/TP	GREEN flashing	Traffic on BACnet MS/TP port
CN/IP	GREEN flashing	Traffic on BACnet IP port
LINK	GREEN	Ethernet link
ACT	GREEN flashing	Ethernet traffic
ONLINE	GREEN	Node is online
PWR	GREEN	Power
STAT	OFF	Normal operation

Buttons

RESET	Reset
STATUS	Send "I AM" message

MAC address

Serial number of the device

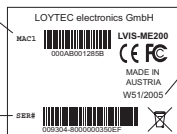

Date Code

Document 88071303
07/2010
Printed in Austria
Data is subject to change

LOYTEC
A Delta Group Company
<http://www.loytec.com>
support@loytec.com