

LDALI-3E10x-U CEA-709/DALI Controller

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

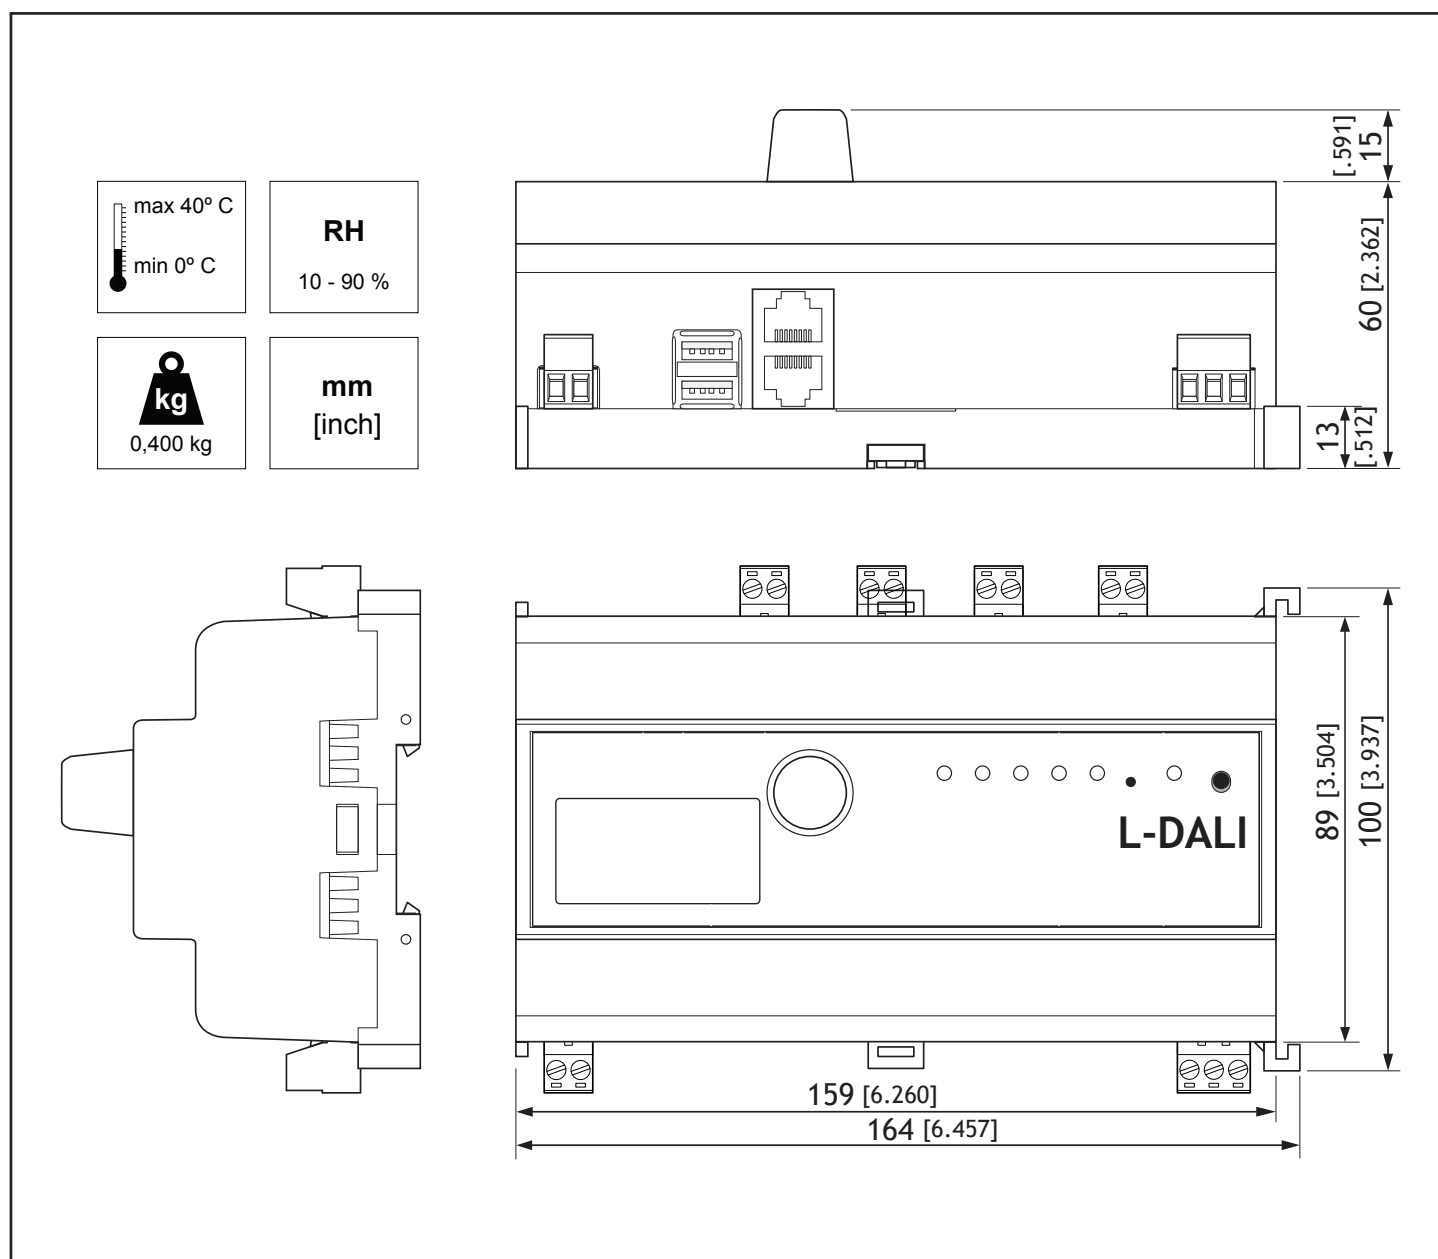


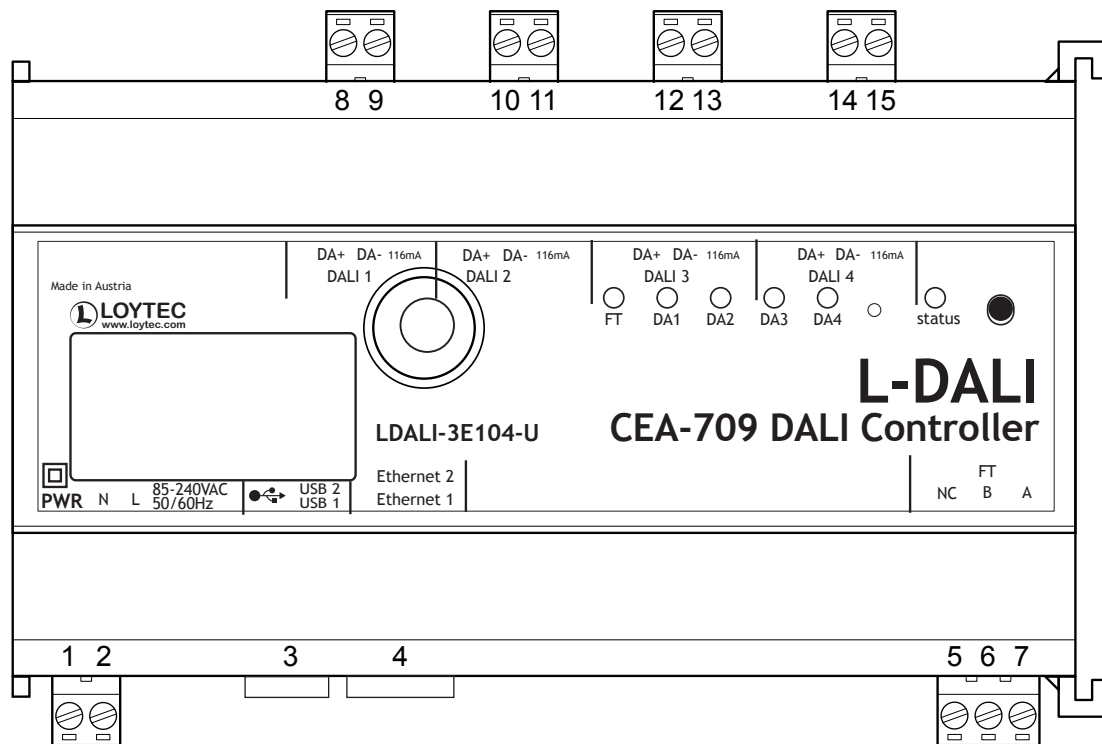


Activate DALI bus power supply on LCD UI.

Connectors		
POWER INPUT 85-240 VAC 50 / 60 Hz	1	Input N, neutral line
	2	Input L, phase line
USB-A	3	2 x USB to PC
ETHERNET	4	2 x 100Base-T Switch
TP/FT-10 CEA-709	5	NC, do not connect
	6	FT Input B
	7	FT Input A


Connectors		
DALI 1 Output	8	DALI plus
	9	DALI minus
DALI 2 Output	10	DALI plus
	11	DALI minus
DALI 3 Output	12	DALI plus
	13	DALI minus
DALI 4 Output	14	DALI plus
	15	DALI minus

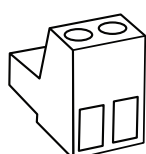

2 poles: Weidmüller BLZP 5.08/02/180
3 poles: Weidmüller BLZP 5.08/03/180



4.5 lb-in/0.5 Nm

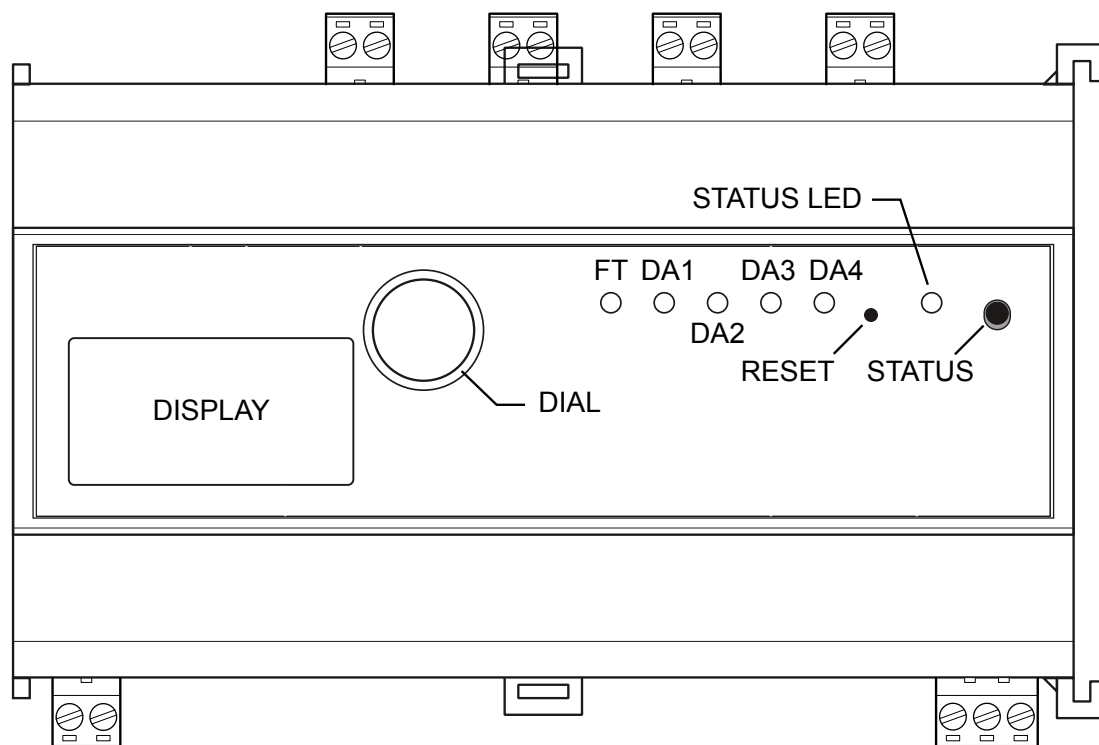


Status LEDs		
STATUS	OFF GREEN ORANGE RED FLASHING	Unconfigured In Operation In Manual / overwrite mode Error Traffic
FT	GREEN flashing GREEN flashing 1 Hz RED permanent RED flashing fast	Traffic on TP/FT-10 port Not commissioned CEA-709 port damaged CEA-709 traffic overload
DA1 to DA4	GREEN flashing RED flashing fast RED permanent ORANGE permanent GREEN permanent	Traffic Traffic with errors Bus power failed Override to all off Override to all on

Please update the firmware of the device first,
see www.loytec.com/support/download

DHCP enabled
User: admin
Password: loytec4u

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

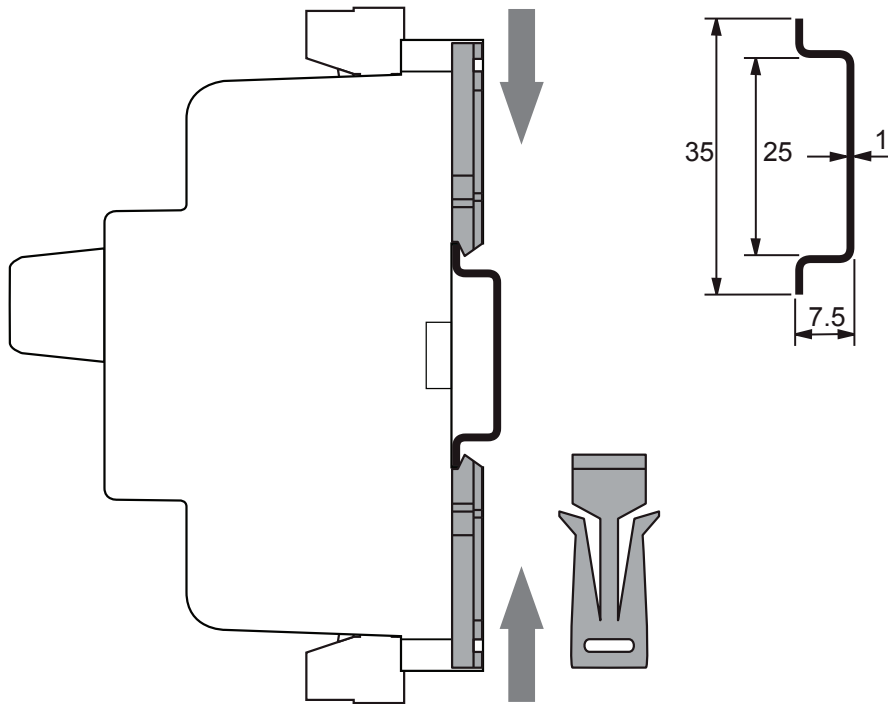


installation DIN rail 1.0

Unique Node ID of CEA-709 port (TP/FT-10)

Virtual (Node) ID of CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

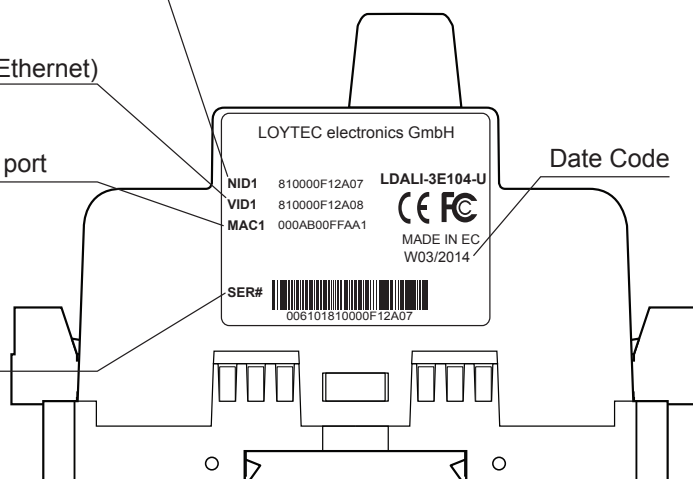

label 1.2